 


OSMO

Tripod

Quick Start Guide V1.0



Disclaimer and Warning

Congratulations on purchasing your new DJI product. The information in this document affects your safety and your legal rights and responsibilities. Read this entire document carefully to ensure proper configuration before use. Failure to read and follow instructions and warnings in this document may result in serious injury to yourself or others, damage to your DJI product, or damage to other objects in the vicinity. This document and all other collateral documents are subject to change at the sole discretion of DJI. For up-to-date product information, visit <http://www.dji.com> and click on the product page for this product.

By using this product, you hereby signify that you have read this disclaimer and warning carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all applicable laws, rules, and regulations, and all terms, precautions, practices, policies and guidelines DJI has made and may make available.

DJI accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in this document.

 
Introduction

The Tripod for the Osmo is used with the Extension Rod to form a stable shooting platform. Its legs unfold outwards and further extend to form a larger base. The Tripod folds into a compact cylinder shape for easy transportation.

Specifications


Dimensions (Legs collapsed)

Radius: 160 mm, Height: 45 mm



Dimensions (Legs extended)


Radius: 260 mm, Height: 58 mm

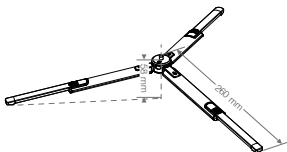


Weight: 254 g

Installation


1. Screw the Tripod into the Extension Rod (sold separately). Then, slide the lock on the Tripod to the locked position.

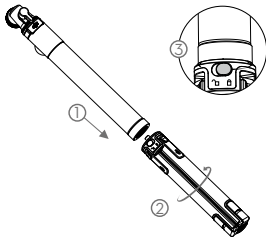

2. Unfold the legs (extend them if desired).

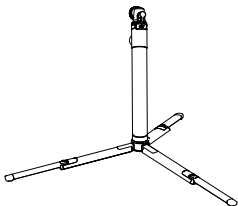

3. Attach the Osmo handle to the Extension Rod's top rosette mount and then tighten the knob to secure.

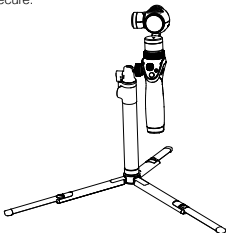

Ensure the lock on the Tripod is in the unlocked position before unscrewing the Extension Rod.

WARNING

Always place the Tripod on a flat and stable surface to prevent the Osmo from tipping over.

The content is subject to change.

Download the latest version from
www.dji.com/product/osmo

If you have any questions about this document, please contact DJI by sending a message to DocSupport@dji.com.