

Firmware Update Guide

1 Prepare the Firmware Update Files


Ensure your Micro SD card has at least 100 MB of free space.



Download the firmware update package.




Unzip and copy the downloaded files into the root directory of your Micro SD card.

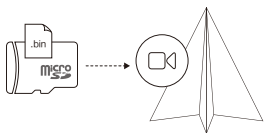

Insert your Micro SD card into the SD card slot on the aircraft.

2 Update the Aircraft

Ensure the Intelligent Flight Battery has at least 50% power.

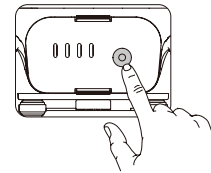

Power on the aircraft to begin the firmware update. Do not power on the remote controller.




The camera status indicator will blink red and green to show that the update is in progress.



The camera status indicator will become solid green and the aircraft will sound 'D — DD' when the update is complete.



Update Successful
Power off the aircraft.

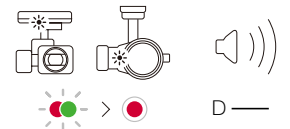

The camera status indicator will become solid red and the aircraft will sound 'D — ' if the update has failed.



Update Failed
Restart the aircraft and try again.