 
# **OSMO**

## **Universal Mount**

Quick Start Guide (V1.0)





# Disclaimer and Warning Congratulations on purchasing your new DJI

product. The information in this document affects your safety and your legal rights and responsibilities. Read this entire document carefully to ensure proper configuration before use. Failure to read and follow instructions and warnings in this document may result in serious injury to yourself or others, damage to your DJI product, or others, damage to your DJI product, This document and all other collateral documents are subject to change at the sole discretion DJI. For up-to-date product information.

visit http://www.dii.com and click on the

product page for this product.

By using this product, you hereby signify that you have read this disclaimer and warning carefully and that you understand and agree to abide by the terms and conditions herein. You agree that you are solely responsible for

You agree that you are solely responsible for your own conduct while using this product, and for any consequences thereof. You agree to use this product only for purposes that are proper and in accordance with all applicable laws, rules, and regulations, and all terms, precautions, practices, policies and guidelines DJI has made and may make available.

DJI accepts no liability for damage, injury or

DJI accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in this document.

#### Introduction

The Universal Mount for the Osmo is used to mount an external device such as a microphone or flashlight. It comes with two cold shoe mounts with 1/4" threads which can be positioned on any of the six holes.

### Specifications

Dimensions:  $84 \text{ mm} \times 30 \text{ mm} \times 30 \text{ mm}$ Weight: 50 g



#### Installation

Attach the Universal Mount to the rosette mount on the Osmo handle and tighten the knob to secure.





To reposition the cold shoe mount, remove the 1/4" thread using a coin or a screwdriver.

### Suggested Combination



#### WARNING

Ensure the Universal Mount is mounted securely and the cold shoe mounts are secure and will not fall off.

The content is subject to change.

Download the latest version from www.dji.com/product/osmo

If you have any questions about this document, please contact DJI by sending a message to DocSupport@dji.com.